

# Blue Aluminum Floor Stand

## Dispenser Stand System

Increase accessibility and usability of hand hygiene products by using Soapopular PLUS® Matte Blue Aluminum Stands. Utilized in high-traffic spaces, facility entrances/exits to place our Automatic Dispensers where hand hygiene is needed.

### Highlights and Features

- Made of durable Blue Aluminum construction to tackle high-use areas with ease.
- Designed with a weighted base to greatly reduce the risk of accidents and knock-overs.
- Integrated Drip-Tray to catch excess drips after every application, preventing slipping hazards around the dispenser stand.
- Can be ordered as an independent floor stand or as a complete floor stand system equipped with our Automatic Foam Dispenser.

### Weighted Base Design

Prevent accidents and messes with our dispenser stands that utilize a weighted base to prevent the risk of knock-overs.



→ Blue Aluminum Construction.

→ Weighted Base Design.



### PRODUCT DETAILS:


|                       |                                      |
|-----------------------|--------------------------------------|
| Stand Material:       | Aluminum Construction                |
| Drip-Tray:            | Integrated                           |
| Compatible Dispenser: | Soapopular® Automatic Foam Dispenser |
| Dispenser Sign:       | Included (design may vary)           |
| Stand Dimensions:     | 14.0in x 14.0in x 73.0in             |
| Unit Weight:          | 20.50 lbs                            |
| Units per Case:       | 1                                    |

Website: [www.soapopular.com](http://www.soapopular.com)  
 E-mail: [info@soapopular.com](mailto:info@soapopular.com)

# Blue Aluminum Floor Stand


## Components Included

- Floor Stand Base x1
- Floor Stand Pole x3
- Bill Board x1
- Black Plate x1
- Screw Accessories x1 Bag
- Key x1
- Washer Plate x1

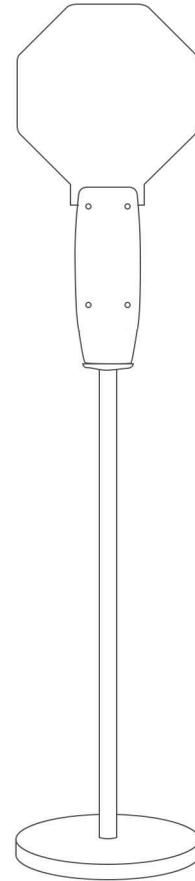


## Installation Instructions

### Step 1

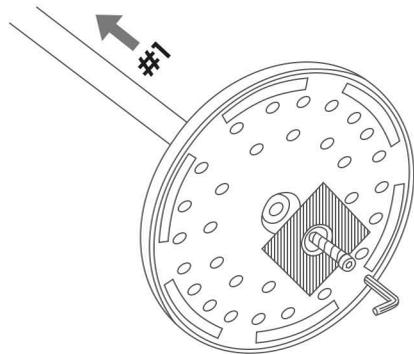


Place pole on base with the printed #1 on pole facing upright. Connect together with the black plate and screw. Tighten with allen key.

### Step 2

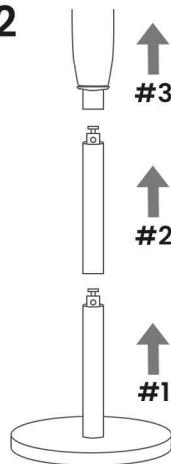

Connect the dispenser poles in order: 1 - 2 - 3. Use screws and allen key to connect the poles together.

### Step 3

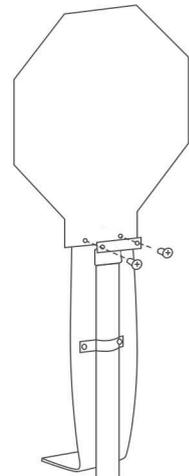

Align screw holes of the sign with holes at the top of stand backplate. Tighten together with washer plate in-between.