

BULK-FILL AUTOMATIC WALLMOUNT DISPENSER FOAMING HAND DISPENSER

Prevent the spread of harmful germs & bacteria at the source by using our Foaming dispensers in your facilities. **With 2,600 applications between refills, our dispenser provides a controlled amount of foam formula** where hand hygiene is required.

HIGHLIGHTS & FEATURES

- Provides 2,600 applications inbetween refills reducing maintenance trips required.
- Foam pump dispenses consistent & controlled amounts of formula to reduce mess.
- Reduce pilferage on site with a protective cover using a key-lock restricting access of the inner cartridge to staff/personnel only.
- Touchless dispenser uses infrared sensor to activate when users hand is under the unit.
- ADA Compliant dispenser in force and one-handed operation.

KEY-LOCK DESIGN

Automatic Dispenser is designed with a key-lock mechanism to prevent theft and damage to the product inside.



PRODUCT CODE: 10222



**RICH FOAM
FORMULA**



**2,600
APPLICATION**

Website: www.soapopular.com
E-mail: info@soapopular.com

DISPENSER MOUNTING INSTRUCTIONS

MOUNTING DISPENSER WITH TAPE

Caution: It is the installer's responsibility to ensure that installation of this unit complies with all applicable standards, codes, and regulatory requirements. Do not install this dispenser above sources of heat or near sources of ignition/flame.


Mount unit only on dry, clean even wall parts or tiles. Do not install on moving furniture/objects (ie; doors) Do not install where a failure of mounting system, or dripping of product from hands may cause damage to equipment or create a potential safety hazard.

Leave at least 2" of clearance above the wallplate to allow for easy bottle insertion & removal. Dispenser is dishwasher safe, top rack only, max water temp. 140F (60C).

Some tile surfaces have treatments that may inhibit adhesion of tape. Test adhesion against the tile before filling dispenser.


Do not use tape with concrete, brick, or masonry surfaces; surfaces that have a coating/chemical impregnation or porous surfaces.

DISPENSER MEASUREMENTS

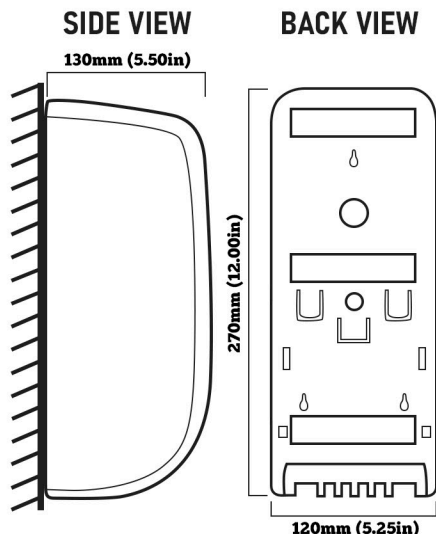


- 1 Find a flat & smooth surface to place the dispenser. First wipe the surface area with the included alcohol wipe.

Ensure a thorough clean of the surface and let the area dry. DO NOT use brick or concrete surfaces.

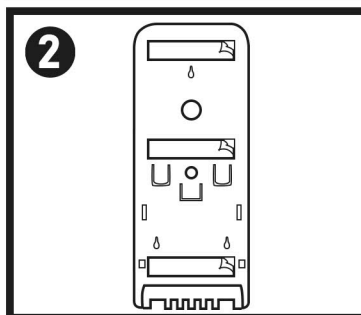


- 2 Peel the thin plastic cover protecting the tape on the back of the dispenser.

There are three long strips of double-sided adhesive tape on the backplate.

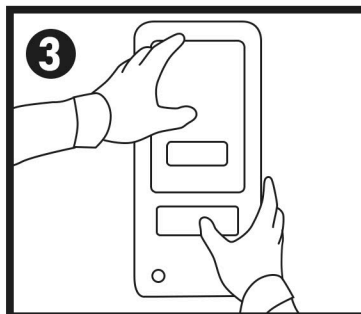

- 3 Place the dispenser on the cleaned flat wall and hold it for 10 seconds.

Continue to apply a firm pressure for 10 seconds.

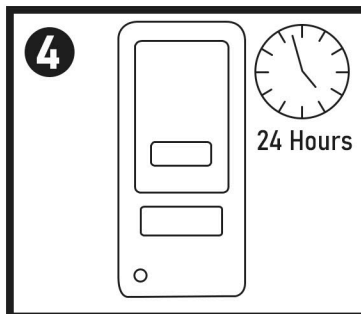

- 4 DO NOT fill the dispenser with product until after 24 hours. This will allow the adhesion to solidify before weight is applied.

DISPENSER MOUNTING INSTRUCTIONS

MOUNTING DISPENSER WITH SCREWS

Caution: It is the installer's responsibility to ensure that installation of this unit complies with all applicable standards, codes, and regulatory requirements. Do not install this dispenser above sources of heat or near sources of ignition/flame.






Mount unit only on dry, clean even wall parts or tiles. Do not install on moving furniture/objects (ie; doors) Do not install where a failure of mounting system, or dripping of product from hands may cause damage to equipment or create a potential safety hazard.

Leave at least 2" of clearance above the wallplate to allow for easy bottle insertion & removal. Dispenser is dishwasher safe, top rack only, max water temp. 140F (60C).

Wall anchors provided with the dispenser are to be used with masonry surfaces such as brick, tiles, & concrete.

For surfaces other than masonry, the installer must use and select the appropriate fasteners. (i.e; zip plugs, and/or toggle bolts.)

DISPENSER MEASUREMENTS

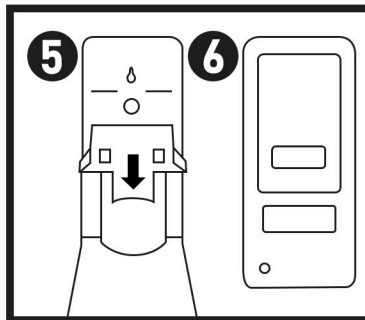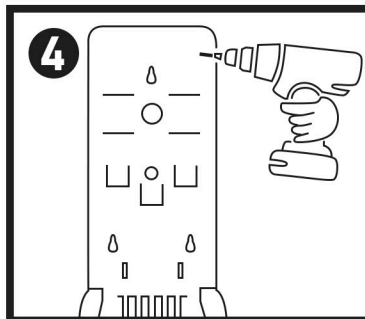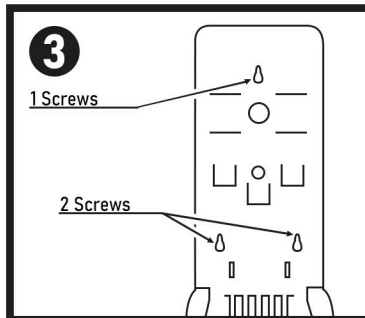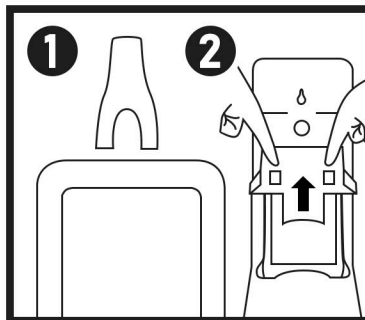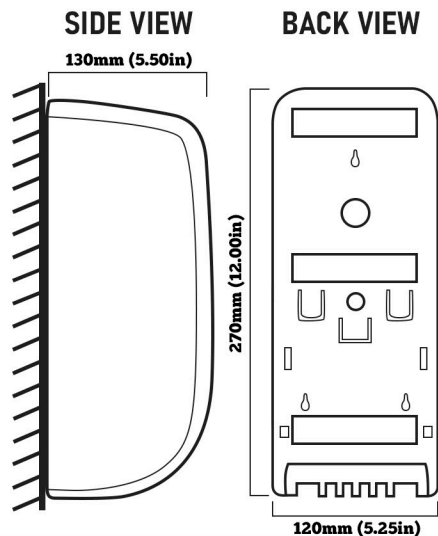

TECHNICAL DATA SPECIFICATIONS

SETUP + REFILL INSTRUCTIONS

1 Use the dispenser key to open the front cover by applying pressure in the two slots on top of the dispenser.

2 With the cover open, remove the bottle inside before the refilling can begin.

3 First remove the cap from the top of the bottle. It is highly recommended that you use a funnel to refill the bottle to reduce accidental spills.






Take a 4L jug of Soapopular products and pour it into the top hole until full.

4 Put the top cap back onto the bottle. Take the full bottle and place it back in the dispenser.

5 Close the protective cover by clicking it back into position. The dispenser is now ready to use.

PLEASE NOTE

Dispenser bottle and pump tip can be bought separately if a new replacement is required.

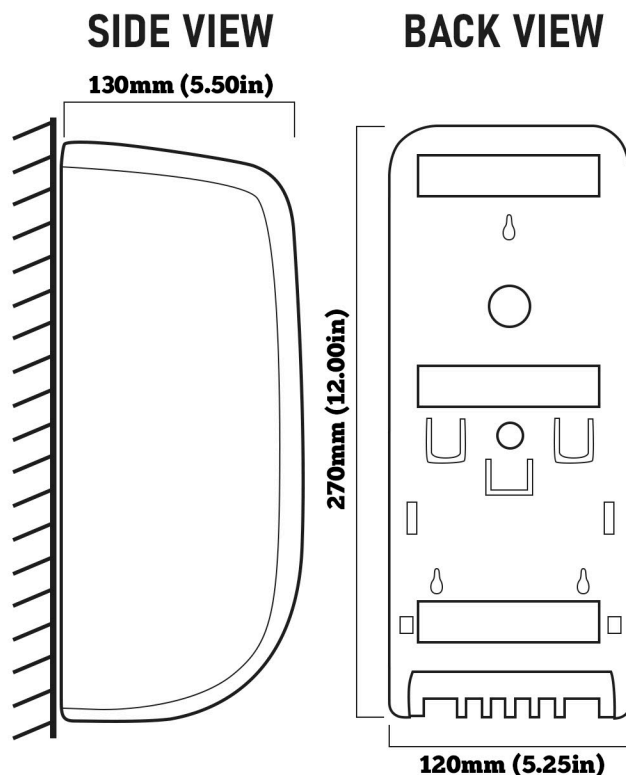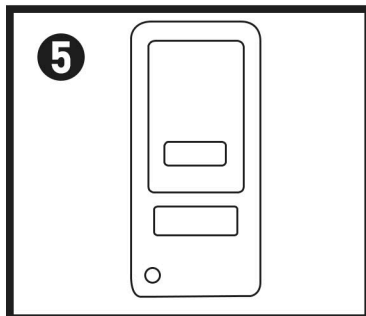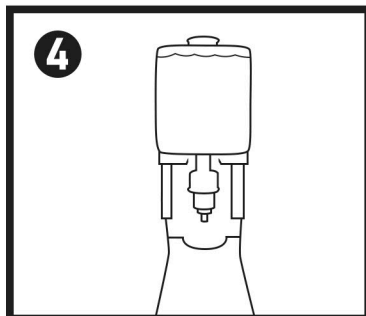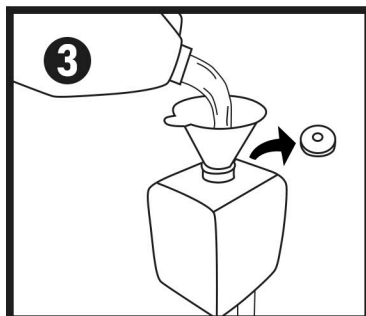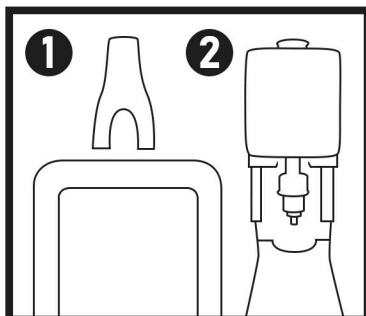

SPECIFICATIONS

Product Code:	10222
Number of Applications:	2,600
Dispensed Formula:	FOAM
Dispenser Capacity:	1,000 (34 o.z)

TECHNICAL DATA

Length x Width x Height:	12.00in x 5.25in x 5.50in
Dispenser Weight:	2.50 lbs.
Pieces per Pack:	1
Pieces per Pallet:	288
Pieces per Pallet:	288

Website: www.soapopular.com
E-mail: info@soapopular.com